0 & M



Bluetooth heaters with steel front



Description of the bluetooth heater

Convector heater with electronic thermostat intended for basic heating. This bluetooth heater has bluetooth technology which let you to control the heater with the Beha Bluetooth App, from a mobile phone or tablet when you are in the house. Beha bluetooth heater with, steel front, are IP24 tested and approved for installation in bathrooms and utility rooms. They can be installed according to current regulations.

After power outage the heater will use the last temperature set at the thermostat dial.

The heater has an open window detection. When opening the window, and the temperature in the room exceeds 15 degrees, the heater will shift between the set temperature and 5 degrees. This function is active for a maximum of 15 minutes.

The packaging is recyclable and should be disposed of in paper containers for cardboard.

Туре	PB 4	PB 6	PB 8	PB 10	PB 12	PB 15	PB 20	LB 5	LB 7	LB 10	LB 12
Art.no.	820418	820420	850421	820422	820423	820424	820425	820620	820621	820622	820623
Effect (W)	400	600	800	1000	1250	1500	2000	500	750	1000	1250

Electrical connection and use

Before connecting, please ensure that the voltage is 230V AC 50Hz. The heater should be connected to the electrical socket in the room where it is intended to be used. Do not connect the heater with an extension cable as this may cause a fire hazard.

Care and Maintenance

Turn the thermostat dial to minimum temperature and turn the switch off. Remove the cord from the socket by gripping the plug and gently pulling it out of the wall socket. Make sure the heater is cooled down before cleaning. Clean the outside with a damp cloth. Never use abrasive cleaners or submerse the heater into water or other liquids.

Vacuum behind and underneath the heater, twice a year. Before vacuuming released the wall bracket on top of the heater. On PB heater the two arms on the wall bracket are mounted in the T slot in the back plate. On LV heater the lower part, at the wall bracket, will hold the heater when vacuuming.

Operational technical information

Warranty

The product comes with a 5-year warranty. In the event of a failure with the heater, a receipt must be presented for replacement within the warranty period.

Other information

Defective heater must be delivered to a collection point for electrical waste. The heater must not be repaired, dismantled, or modified.

Contact Information: Beha Elektro AS, Evjeløkka 3, 1661 Rolvsøy. +47 35 51 62 50

post@beha.no - www.beha.no