

BEHA SMARTHEATER APP

PV, LV, PGV, LGV, HR, LR - Gen 1 og 2

USER GUIDE

BEHA

INNHold

Nyttig å vite før tilkobling til app	3
Opprett konto	3
Opprett et sted og tilknytt ovn	4
Hvordan bruke appen	6
Lag et PROGRAM for et rom	6
Bruk av programmet MANUELL	7
Meny valg under de tre prikkene	7
Wi-Fi Gen 1 feilsøking	9
Wi-Fi Gen 2 feilsøking	9
Tips for Gen 1 og Gen 2 ovner	9
Tips for Gen 1 ovner	10

Les bruksanvisningen nøye før bruk, og ta vare på den for senere bruk.
Bruksanvisningen ligger også på beha.no.

SPRÅK / LANGUAGES:

NO	2
UK	11



Gjelder for:
PV, LV, PGV, LGV, HR, LR
- Gen 1 og 2

Nyttig å vite før tilkobling til app

Denne appen fungerer for Gen 1 og Gen 2 ovner.

Støttende versjoner av smarttelefon

Appen fungerer fra iOS 13 og Android 8, og oppdateres automatisk.

Krav til passord

Passordet må inneholde minst 8 tegn.

Passordet må bestå av:

- Små bokstaver
- Store bokstaver
- Tall
- Et symbol (eks. #)

Flere brukere

Med én innlogging kan man ha flere brukere. Disse må da ha: Felles brukernavn og passord. Alle har fulle rettigheter.

Bytte av ruter

Ved bytte av ruter må ovner tilknyttes på nytt.

Flytte ovnen til et nytt sted (fra hus til hytte)

Flyttes ovnen til et sted til et annet eller til en annen bruker, må den slettes i appen og settes tilbake til tilkoblingsmodus.

Antall steder og rom

Det kan opprettes flere steder og hvert sted kan ha flere rom.

Ved strømbrydd / defekt ruter

Dersom ovnen mister kontakten med ruter, vil den fortsette å følge programmet, men det vil ikke være mulig å styre den fra appen.

Etter et strømbrydd går ovnen tilbake til siste innstilte program/temperatur.

 
Opprett konto

1: Last ned appen

Last ned appen «Beha» fra App Store (iPhone) eller Google Play (Android).



Bruker du appen for første gang må det først opprettes en konto.

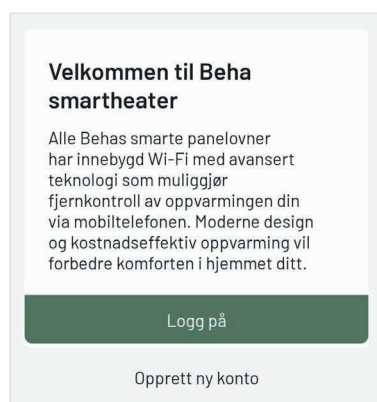

2: E-post adresse

Trykk på «Opprett ny konto» og legg inn e-post adressen din. Trykk på «Send verification code». Koden sendes til din e-post og må kopieres til appen. Oppretting av passord vil ikke være tilgjengelig før koden er verifisert.

BEHA

User Details

Please provide the following details.

Email Address

Send verification code

3: Verifikasjonskode

Kopier inn koden i feltet VERIFICATION CODE og trykk på Verifiser kode. Om koden ikke er synlig i innboksen din, sjekk søppelpost-mappen. Hvis koden ikke ble mottatt, trykk på "Send new code" - knappen.

BEHA

User Details

Please provide the following details.

Verification code has been sent to your inbox. Please copy it to the input box below.

Email Address

Verification Code

Verify code Send new code

4: Passord

Når koden er godkjent, kan passord legges inn. Passordet må være mellom 8 og 64 tegn og Passordet må bestå av:

- Små bokstaver
- Store bokstaver
- Tall
- Et symbol (eks. #)
- Trykk på Create.

BEHA
User Details

Please provide the following details.

E-mail address verified. You can now continue.

Email Address

anita.melby@beha.no

Change e-mail

New Password

New Password

Confirm New Password

Confirm New Password

Create

Opprett et sted og tilknytt ovn

1: Opprett et Sted

For å kunne tilknytte ovner til appen må du først opprette et hjem eller Sted som vi kaller det. Trykk på meny (oppe i høyre hjørne) og gi ditt sted et navn.

09:33 67%

For å begynne å bruke applikasjonen, åpne menyen og opprett ditt første Sted

2: Tilkoble en ovn

For å koble til en ovn til ditt sted trykk på Start connecting. For å tilkoble ovner må appen ha tilgang til steds-tjenester/din posisjon og Bluetooth (for Gen 2 ovner). Gi den alle tillatelser som appen ber deg om for å fortsette tilkoblingen.

Hjemme

Slik kobler du til

For å koble deg til ovnen, krever applikasjonen tilgang til Wi-Fi. Flytt ovnen nærmere ruten du vil koble til, og hvor signalstyrken vil være høyest. Velg så 'Koble til'-knappen.

Start connecting

3: Navn på ovn og rom

Gi rommet og ovnen et unikt navn. Disse må være ulike. Du kan legge til et nytt rom ved å utvide Rom-feltet og velge "+ Legg til nytt rom".

Legge til ny ovn til stedet ditt

NAVN PÅ OVNE

f.eks. Ovn vegg nord

ROM

Stue

Koble til ovn

Avbryt

4: Velg hvilken generasjon av ovn du har

Se på typeskilt (ID) på ovnen.

Wi-Fi Gen 1 er merket med teksten, f.eks.:

Type: PV 12 Wi-Fi. Når ovnen slås på for første gang projiseres et pulserende Wi-Fi symbol gulvet.



Wi-Fi Gen 2 er merket **Wi-Fi Gen 2** på type skiltet. Teksten er f.eks.:

Type: PV 12 Wi-Fi Gen 2. Når ovnen slås på for første gang vil et Bluetooth-symbol projiseres på gulvet.



Koble til ovn

Hvilken enhet vil du legge til?

Velg den ovnen du har under.

Velg Wi-Fi hvis du har generasjon 1-Ovnen med blinkende Wi-Fi-ikon. Sørg for at sammenkoblingsmodus er aktivert.

Velg Wi-Fi BLE-ovn hvis du har generasjon 2-Ovnen med Bluetooth ikon. Sørg for at Bluetooth modus på ovnen er aktivert.

Wi-Fi Gen 1

Wi-Fi Gen 2

Tilkobling av WI-FI Gen 1 ovner

Tilkobling av WI-FI Gen 1 ovner

Sjekk dette ved tilkobling av Wi-Fi Gen 1
Ovnene må resettes til fabrikkinnstilling / tilkoblingsmodus dersom:

- Ovnene har vært tilkoblet en tidligere Beha app
- Ruterens passord er endret
- Ved bytte av ruter
- Ovnene har vært brukt på et annet sted og er tilkoblet en annen ruter
- Ovnene er flyttet fra et sted til et annet (eks. fra hytten til boligen din)

Plassering av termostaten og bryteren

Under lokket finner du bryteren og termostaten. Trykk ned for å fjerne det.



Sette ovnen (Gen 1) i tilkoblingsmodus

Skru termostatrattet ned til det lyser 5.0 OC → 0 → <<rES>> blinker på gulvet → fortsett å skru til teksten <<rES>> lyser kontinuerlig.

Slå bryteren raskt av og på, i løpet av 1 sekund.
Er ovnen satt i tilkoblingsmodus pulserer Wi-Fi symbolet og temperaturen viser 22 grader. Pulserer det ikke gjenta resetingen.

 
Etter resetting slå bryteren på ovnen av og fjern støpselet fra stikkontakten, om mulig. Strømmen til ovnen slås på når ruterens passord er lagt inn i appen.

Wi-Fi Gen 1 tilkobling

Husk at telefonen må være tilkoblet 2,4 GHz båndet på ruter. Når du har opprettet et navn på rom og ovn, må det velges hvilken generasjon av ovn som skal kobles til.

Når Wi-Fi Gen 1 velges:

- Trykk på Koble til ovn (sjekk at telefonen er på 2,4 GHz båndet)
- Gi appen tilgang til posisjon når appen brukes
- Legg inn ruterens passord, (sjekk at store og små bokstaver er riktig før du går videre)
- Koble strøm på ovnen og slå bryteren på ovnen PÅ
- Trykk Koble til ovn, appen søker nå etter ovn

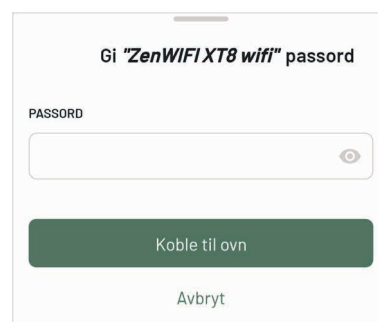

Når ovnen er tilkoblet appen trykk på rommet og lag et program. Manuell temperatur kan brukes i 24 timer. Etter 24 timer går ovnen til program temperaturen.

Merk: Wi-Fi nettverksnavnet kan ikke ha mer enn 32 tegn.

Se flere tips side 10

Tilkobling av WI-FI Gen 2 ovner

Sjekk dette ved tilkobling av Wi-Fi Gen 2

Ovnene må være i tilkoblingsmodus. Lyser Bluetooth symbolet på gulvet er ovnen klar for tilkobling. Bluetooth og Wi-Fi på telefonen skal være på. Ved tilkobling vil appen se alle ovner som er i tilkoblingsmodus. Vi anbefaler derfor at kun den ovnen som skal tilkobles, settes i tilkoblingsmodus.

Sett Wi-Fi Gen 2 ovnen i tilkoblingsmodus

Slå bryteren AV/PÅ eller skru termostatrattet ned til det <<rES>> blinker på gulvet. Ovnene resetter seg. Når den er ferdig vises 22 grader og Bluetooth symbolet på gulvet. Har du flere Wi-Fi Gen 2 ovner som skal tilkobles slås disse av.

Wi-Fi Gen 2 tilkobling

Når du har opprettet et navn på rom og ovn må det velges hvilken generasjon av ovn som skal kobles til.

Når Wi-Fi Gen 2 velges:

- Trykk på Koble til ovn (appene søker etter Bluetooth enheter)
- I neste bilde kommer ovnens navn (f.eks. BEHA_5AD21C) opp. Trykk Koble til
- Velg Wi-Fi nettverket som ovnen skal kobles til og legg inn ruterens passord
- Ovnene kobler seg nå til appen

Når ovnen er tilkoblet appen trykk på rommet og lag et program. Manuell temperatur kan brukes til du endrer det selv.

 
Merk: Wi-Fi nettverksnavnet kan ikke ha mer enn 32 tegn.

Se flere tips side 10.

Hvordan bruke appen

Dine Steder

Dine steder (f.eks. Hjemme) viser alle rommene som er opprettet, på et Sted, med målt temperatur. Skal det opprettes flere Steder (eks. hytte) trykk på menyen (tre prikker) oppe i høyre hjørne.

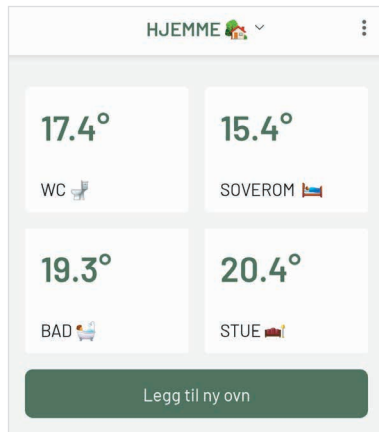

Trykker man på Koble til ovn kan flere ovner legges til eksisterende rom, eller man kan tilknytte ovn og opprette nye rom.

I appen kan man sette opp et Program for rommet eller bruke Manuell temperatur. Les mer om bruk av Manuell programmet på neste side.

Rommene vises som hvite bokser med navn på rommet og målt temperatur. Er rommet offline eller slått AV vil en ON/OFF knapp vises, og rommet har grå bakgrunn.

Lag et PROGRAM for et rom

 
 
Lage et Program for en dag og kopier det til alle dager. Hver dag kan også programmeres med forskjellige temperaturer.

Eksempel på hvordan man setter tidsintervaller.

Setter man klokkeslett til f.eks. 06:00 og temperaturen til 21°C, vil ovnen holde denne temperaturen til neste klokkeslett som settes, f.eks. 08:00. Fra kl. 08:00 til 21:00 holder ovnen 18°C og fra kl. 22:00 til 06:00 holder den 18°C.

Under menyen (tre prikker) oppe i høyre hjørne kan man kopiere programmet for en dag til flere dager. Husk å Lagre endringer.

Tiden kan endres ved å trykke på tidspunktet. Da vil en klokke komme opp (Android).

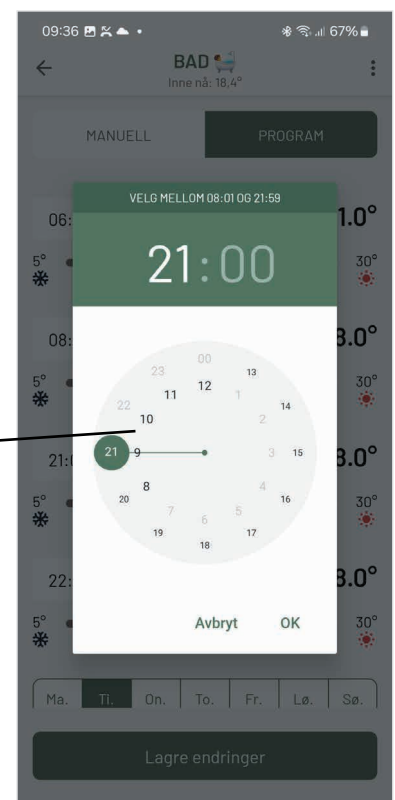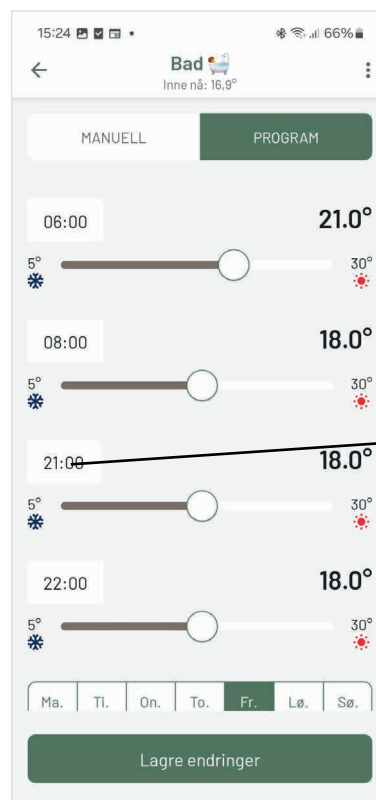

Bruk av programmet MANUELL

Programmet Manuell brukes når det er behov for å endre temperaturen for en kortere tid.

Wi-Fi Gen 1 - Etter 24 timer går ovnen tilbake til Program med de temperaturer som er satt der.

Wi-Fi Gen 2 - Temperaturen som stilles i Manuell vil vedvare. Ovnene går tilbake til Program når du aktiviserer det selv.

 


Meny valg under de tre prikkene

Menyen '...', og gir tilgang til flere innstillinger. Her får man tilgang til:

I Dine Steder (Hjemme)

- Slett sted
- Gi sted nytt navn
- Legg til nytt sted
- Koble til ovn
- Innstillinger

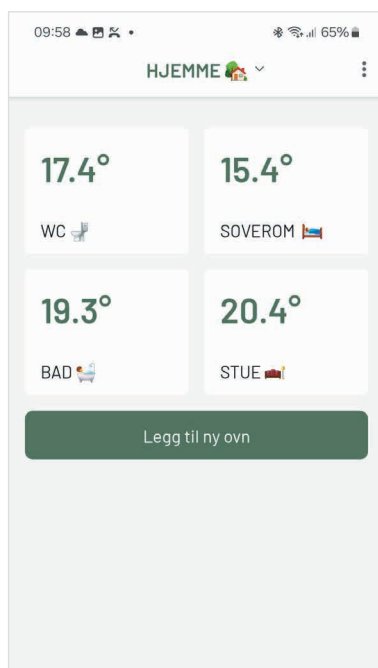


I PROGRAM

Menyen gir tilgang til:

- Slett rom
- Gi nytt navn til rommet
- Ovner i rommet
- Kopier program
- Koble til en ovn

 
(Grafikk vil variere mellom ulike telefoners operativsystemer)

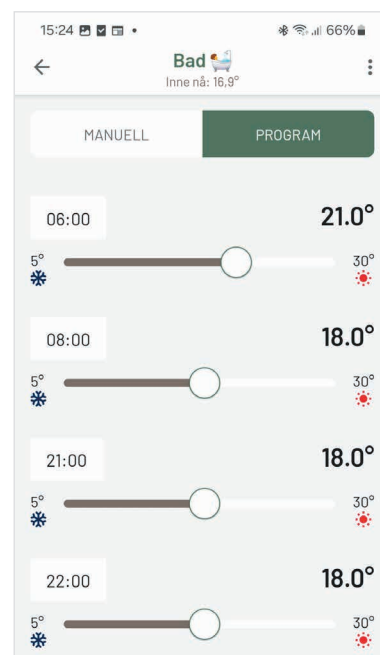

I MANUELL


Menyen gir tilgang til:

 - Slett rom
- Gi nytt navn til rommet
- Ovner i rommet
- Koble til ovn

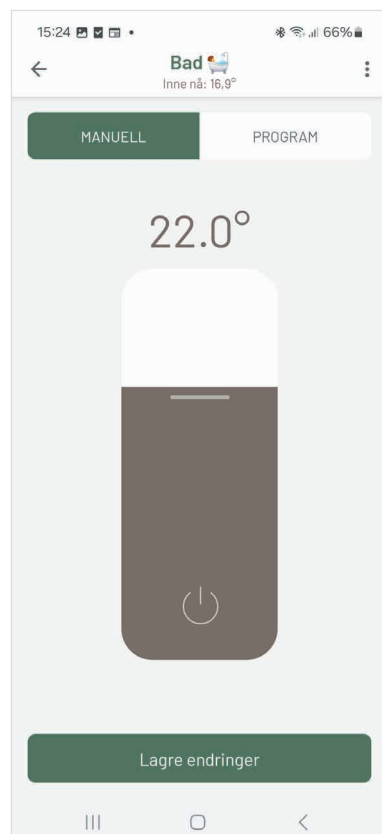**Ovner i rommet**

I menyen ved siden av navnet på ovnen, gis tilgang til:

 - Slette ovn
- Flytt til et annet rom
- Gi nytt navn til ovn
- Slå på Barnesikring
- Slå AV/PÅ ovn

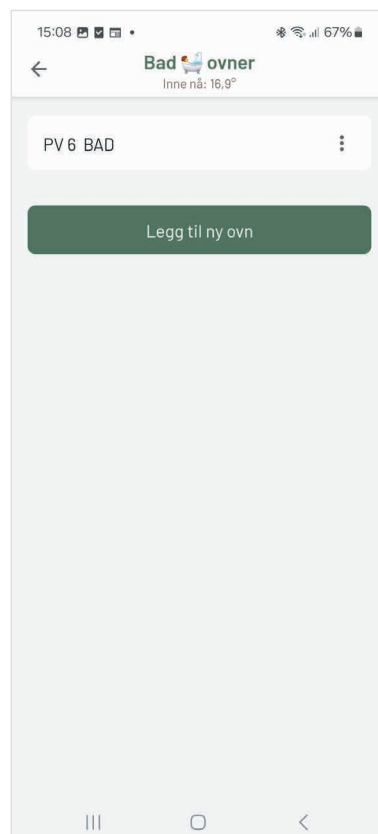

Wi-Fi Gen 1 feilsøking

Får du meldingen “Ingen enheter funnet” prøv følgende:

- Resett ovnen slik at Wi-Fi pulserer og 22 grader vises på gulvet
- Sjekk at telefonen er tilkoblet 2,4 GHz båndet på ruterens din
- Sjekk innstillingene for 2,4 GHz båndet på ruterens
- Sjekk at Wi-Fi er påslått på telefonen
- Sjekk at appen har tilgang til posisjon
- Lukk appen og åpne den på nytt
- Sjekk at passordet til ruterens er riktig
- Oppdater appen til siste versjon

Wi-Fi Gen 2 feilsøking

Hvis du får skjermbildet “Ingen enheter er funnet”, prøv følgende løsninger:

- Resett ovnen / sett den i tilkoblingsmodus og ta støpselet ut fra stikkontakten
- Lukk appen og åpne den på nytt
- Sjekk at telefonen har Bluetooth og Wi-Fi aktivert
- Sjekk at appen har tilgang til posisjon / stedstjenester
- Sjekk at ovnen og telefonen er innenfor rekkevidden til Wi-Fi-nettverket
- Sørg for at Wi-Fi-ruterens din fungerer som den skal
- Sjekk at passordet til ruterens er riktig
- Oppdater appen til siste versjon

Tips for Gen 1 og Gen 2 ovner

Slå AV ovn i appen

For å slå av en ovn gå til innstillinger for ovnen og slå AV.Ovnene kan også slås av ved å trykke på symbolet AV/PÅ når du står i programmet MANUELL. Husk å trykke Lagre. For å slå på ovnen skru på termostathjulet eller slå PÅ ovnen i appen. Husk å Lagre.



- Når ruterens er på internett igjen slå bryteren på ovnen PÅ
- Åpne appen

Nettverks-navn

Wi-Fi nettverksnavnet kan ikke ha mer enn 32 tegn, da dette vil hindre ovnen fra å koble seg til.

Bruk av Barnesikring

Gen 1: For å slå av barnesikringen som er satt fra appen, kan bryteren på ovnen slås AV/PÅ eller slå den av i appen.

Gen 2: Det er kun mulig å deaktivere funksjonen i appen, eller man må resette ovnen tilbake til fabrikkinnstilling.

Oppdatere («Refresh») i appen

Appen kan oppdateres fra Dine Steder ved å sveipe fingeren fra toppen av skjermen og ned.

Ovner er offline i appen

Er ovner offline i appen kan det være at:

- Wi-Fi nettverket er nede
- Det er/har vært strømstans
- Brannmur i ruterens blokkerer ovnen

Er ovner offline kan man prøve følgende:

- Lukk appen
- Slå bryteren på ovnen AV
- Slå ruterens AV og PÅ

Krav til telefonen

Appen fungerer med iOS 13 og Android 8.

Krav til ruterens

For best mulig signal bør ruterens plasseres midt i boligen. Som med alle andre trådløse signaler blir også Wi-Fi signalet svakere jo lenger avstanden til kilden er. Vegger og andre hindringer påvirker også signalet. Alternativet er å kjøpe en Wi-Fi forsterker. Passord på forsterkeren må være det samme som på ruterens. For å finne denne informasjonen, sjekk ruterhåndboken, kontakt produsenten eller internettleverandøren.

Brannmur i ruterens

Dersom alle ovner er offline etter tilkobling, kan det skyldes at brannmuren i ruterens er aktivisert. Da må denne åpnes. Port 8883 og 443 i ruterens må være åpen. Kontakt nettleverandøren for hjelp.

Tips for Wi-Fi Gen 1 ovner

Innstillinger i ruterer for Gen 1 ovner

De fleste moderne Wi-Fi-rutere opererer samtidig i 2,4GHz og 5,0GHz frekvensbåndene. Wi-Fi Gen 1-ovner fungerer bare i 2,4GHz-båndet. Derfor er tilkoblingsprosessen for Wi-Fi Gen 1-ovner kun mulig når smart-telefonen din er koblet til 2,4 GHz-båndet Wi-Fi.

Innstillinger på ruterer:

- Støtter WEB, WPA/WPA2 og åpent nettverk.
- Den støtter 2,4 GHz, og 20Mhz konfigurasjon. IKKE 40 MHz.
- Trådløst nettverk: IEEE 802.11 b/g/n med automatisk kanalvalg.
- DHCP på ruterer skal være aktivert.
- Kanal 1 til 13.
- Port 8883 og 443 i ruterer må være åpen.

Den enkleste måten å forsikre deg om at du er i riktig Wi-Fi-nettverk, er å logge deg på ruterer og midlertidig deaktivere 5,0 GHz-båndet når ovner tilkobles.

Hvis du er usikker på hvordan du skal utføre en slik endring på ruterer din, vennligst sjekk ruterens bruksanvisning eller kontakt din internettleverandør eller ruterprodusent direkte.

Når sammenkoblingsprosessen er fullført, kan du reversere ruterer til din forrige innstillingene.

Asus Wi-Fi-ruter

På noen ASUS-rutere finnes det en funksjon som kalles "Smart Connect" som tvinger Wi-Fi-enheter over til 5 GHz hvis signalkvaliteten er bedre enn den nødvendige 2,4 GHz signalet. Dette kan skape problemer for varmeovner fordi 5 GHz for øyeblikket ikke støttes. Vi anbefaler derfor at denne "Smart Connect" - funksjonen deaktiveres når du kobler til varmeovner, og heller aktiveres igjen etter at varmeovnen er koblet til vellykket.

Gjør derfor følgende:

Wireless menu → Professional Tab → Airtime Fairness → Deactivate Airtime Fairness

VPN må slås AV

Dersom telefonen har VPN installert, må denne være avslått når ovner skal tilknyttes.

CONTENT

Before you start connecting	12
Creating new account and log inn	12
Setting up new Home and Connecting heater	13
Connecting Wi-Fi Gen 1 heaters	14
Connecting Wi-Fi Gen 2 heaters	14
Managing Your Home	15
Set Up A Schedule For A Room	15
Using the program MANUAL	16
The Three Dots Context Menu	16
Wi-Fi Gen 1 Troubleshooting	18
Wi-Fi Gen 2 Troubleshooting	18
Hints Gen 1 and 2 Heaters	18
Hints Gen 1 heaters	19

Please read the manual carefully before use of the heater and save it for later reference. This user guide is also available at beha.no.

LANGUAGES:

NO	2
UK	11



This user applies to:
PV, LV, PGV, LGV, HR, LR
- Gen 1 and 2

Before you start connecting

This app will work for Gen 1 and Gen 2 heaters.

Supported versions of smartphone

The app is working from iOS 13 and Android 8.
Updating of the app is automatic.

Password requirements

The password must be between 8 and 64 characters.
Your password must have at least 3 of the following:

- Lowercase letters
- Uppercase letters
- Digit / number
- Symbol (eg. #)

Multiple user

If there are multiple users, everybody needs to log in with the same e-mail address /username and password.

New router

When replacing the router, the heaters must be relinked.

Removing the heater to a new place (house/cabin)

If the heater is moved from one place to another, or to a new user, it must be deleted from the app and reset back to factory settings.

Several places and room

You may set up several places, rooms, and heaters in the app.

By power outage / router defect

If a heater lose contact with the router it will continue to follow the schedule, but it will not be possible to control the heater from the app.

After a power outage the heater returns to the last set program / temperature.

 
Creating new account

Step 1: Download the app

Download the app «Beha» from App Store (iPhone) or Google Play (Android).



If you are using the app for the first time, please create a new account.

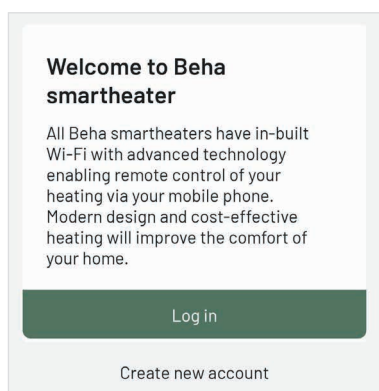

Step 2: Email address

Tap on “Create new account” and provide an email address. Tap “Send verification code” button. The verification code will be sent to your email address and must be copied to the app. Password fields will remain unavailable until the code is verified.

BEHA

User Details

Please provide the following details.

Email Address

Send verification code

Step 3: Verification code

Copy the code to the field VERIFICATION CODE and tap on Verify code. If the code is not visible in your inbox, check your spam folder. If the code was not received, tap the “Send new code” button.

BEHA

User Details

Please provide the following details.

Verification code has been sent to your inbox.
Please copy it to the input box below.

Email Address

Verification Code

 
Verify code **Send new code**

Step 4: Password

When the code is verified successfully, you can set a new password. The password must be between 8 and 64 characters and include:

- Lowercase letters
- Uppercase letters
- Digit / number
- Symbol (eg. #)

Tap on Create.

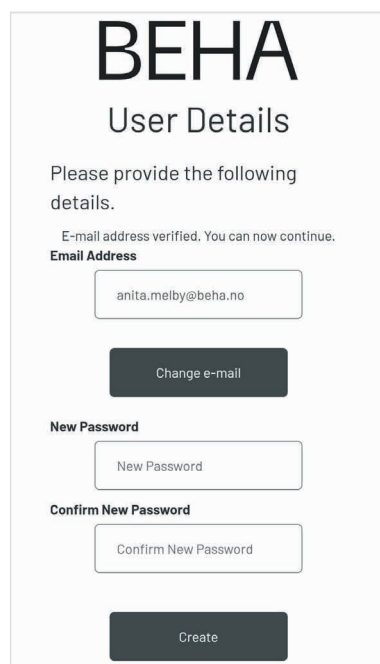

BEHA
User Details

Please provide the following details.

E-mail address verified, You can now continue.

Email Address

anita.melby@beha.no

Change e-mail

New Password

New Password

Confirm New Password

 
Confirm New Password

Create

Setting up new Home and Connecting heater

Step 1: Create a new Place

To add your heaters to the app, you need to first create a new home also known as Place. Tap the menu (in the top right corner) and name your place.

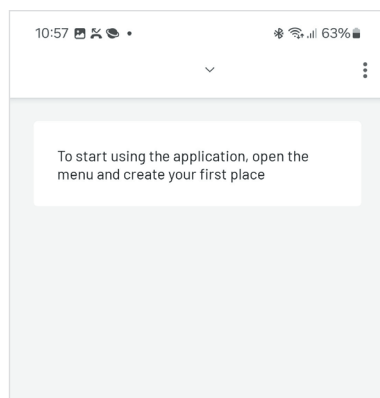


10:57 63%

To start using the application, open the menu and create your first place

Step 2: Add the heater

 To add the heater to your home, tap the “Start connecting” button. Provide the name of the room and start the pairing process. To complete the pairing process, the app needs permission to access your location and Bluetooth (for Gen 2 heaters). Please allow all permissions when the app prompts you, to continue the process.

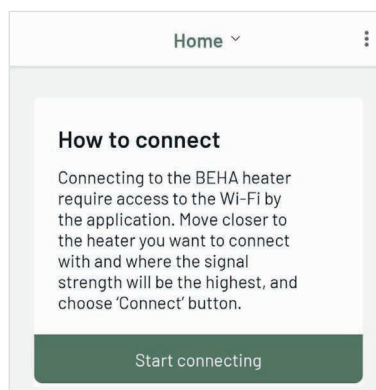

Home

 
How to connect

Connecting to the BEHA heater require access to the Wi-Fi by the application. Move closer to the heater you want to connect with and where the signal strength will be the highest, and choose 'Connect' button.

Start connecting

Step 3: Heater name and room

Provide the name of the room and start the pairing process. Heater name and room name can't be the same. You can add a new room by expanding the Room field and choosing “+ Add new room”.

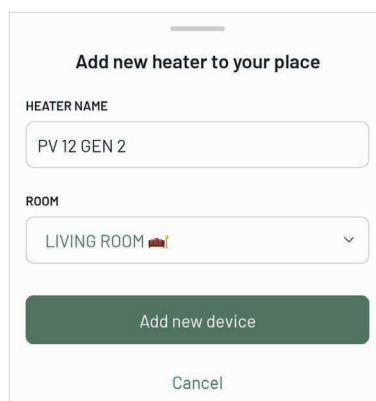

Add new heater to your place

HEATER NAME

PV 12 GEN 2

ROOM

LIVING ROOM

Add new device

Cancel

Step 4: Choose heater generation

To validate the generation of your heater, please check the aluminium (ID) label on the heater.

Gen 1 is marked with e.g. :

Type: PV 12 Wi-Fi.

When you turn on the heater for the first time **Gen 1** heaters project a pulsating Wi-Fi icon on the floor.



Gen 2 is marked with e.g. : Type: PV 12 Wi-Fi Gen 2. This generation of heaters will be marked **Wi-Fi Gen 2** on the label. When you turn on the heater for the first time the Bluetooth icon is projected on the floor.



Which device do you want to add?

Please choose the correct generation of the heater you're trying to connect.

Choose Wi-Fi Gen 1 if you see the Wi-Fi icon on the floor.

Choose Wi-Fi Gen 2 heater if you see the Bluetooth icon on the floor.

In both cases, make sure that linkup mode is enabled.

Wi-Fi Gen 1

Wi-Fi Gen 2

Connecting Wi-Fi Gen 1 heaters

Preconditions

The heater must be re-set to the link-up mode (factory settings) if any of the cases occurred:

- The heater was connected to an older app
- The Wi-Fi password was changed
- The Wi-Fi router was replaced
- The heater was acquired as a used device (second-hand)
- You are about to connect the heater at a new place (cottage or second home)

Location of the thermostat wheel

Under the Child safety lid, you will find the switch and thermostat.

Push down the lid, to remove it.



Reset the heater (Wi-Fi Gen 1) to pairing mode

Turn the thermostat wheel down until it lights up 5.0 °C → 0 → <<rES>> flashes on the floor → keep turning until the text <<rES>> lights continuously. Turn the switch off and on, without any longer break than 1 second between turning off and on.

 
If the Wi-Fi light pulsate on the floor, and the temperature is 22 degree the heater is reset. If the Wi-Fi symbol does not pulsate, repeat the same procedure again.

When the heater is reset turn the switch off, on the heater. If it is possible, remove the plug from the socket. Switch on the power when the router's password has been entered, in the app.

Pairing steps – Wi-Fi Gen 1

Connect your smartphone to the 2,4GHz Wi-Fi. When the heater name and room are made, choose the correct generation of the heater. When Wi-Fi Gen 1 is selected:

- Tap on Add new device
- Give the app access to Location while using the app
- Provide the password to the router
- Connect the plug on the heater ,to the socket and turn the switch ON
- Tap on Add new device.

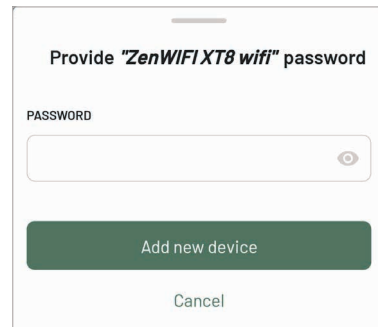

Wait for the pairing process to complete.

Open the room to configure the Schedule or set the temperature. Remember that Manual temperature only is valid for 24 hours. After that the heater will return to the Schedule temperature.

Note: the name of your Wi-Fi network cannot be more than 32 characters.

More hints for generation 1 heater at page 18.

Connecting Wi-Fi Gen 2 heaters

Preconditions

The heater must be in link-up mode. Bluetooth and Wi-Fi must be ON in the phone. When connecting, the app will see all heaters that are in pairing mode. We therefore recommend that only the heater that you connect, is in pairing mode.

Reset the heater (Wi-Fi Gen 2) to pairing mode

Turn the switch OFF/ON. If the heater is in link-up mode, the Bluetooth symbol and 22 degrees are projected on the floor. If not, reset the heater. Turn the thermostat wheel down to <<rES>> flashes on the floor. The electronics are now starting with resetting. When finished, 22 degrees and the Bluetooth symbol will appear on the floor.

Pairing steps – Wi-Fi Gen 2

When a Room and Name of heater is made, select the generation for your heater.

When Wi-Fi Gen 2 is chosen:

- Tap on Add new device (the app will be searching for Bluetooth heaters)
- In the next picture the heater name appears (like this: BEHA_5AD21C). Tap on Connect.
- Choose your Wi-Fi network and tap on Connect
- Provide the password to your Wi-Fi network and tap on Add new device

Note: The name of your Wi-Fi network cannot be more than 32 characters.

 
When the pairing process is completed open the room to configure the SCHEDULE or set a temperature in MANUEL.

Se more hints at page 18.

Managing Your Home

The Home Screen

The Home Screen lets you manage all rooms and heaters located in your household. The room tiles display the average measured temperature by all heaters in that location.

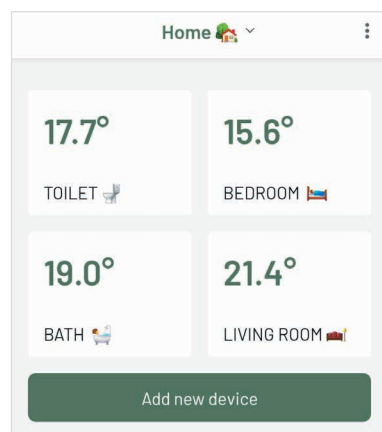

If you wish to add heaters in the new place (second home, cabin, cottage, etc.), use a three-dot menu in the top right corner of the screen.

In the app, you can set up a SCHEDULE program for the room or use MANUEL temperature. Read more about using the MANUAL program on the next page.

The rooms are displayed as white boxes with names of rooms and measured temperature. If the room is offline or switched OFF, an ON/OFF button will appear, and the room does not have a grey background.

Set Up A Schedule For A Room

 
 
Program different temperature for a day. A program created for one day can easily be copied to one or more days. You then adjust each day individually if you wish.

How to set time intervals

If you set the time to e.g. 06:00 and the temperature to 21 °C, the heater will hold this temperature until the next time that is set, e.g. 08:00. Starting at. From 08:00 to 21:00 the heater maintains 18 °C and from 22:00 to 06:00 it stays at 18 °C.

The time can be changed by tapping the time. Then a clock will appear.

(The visuals / graphics will vary between phones different operating systems.)

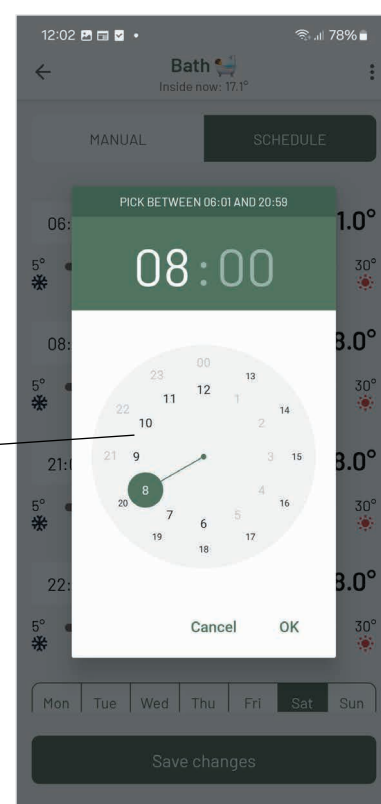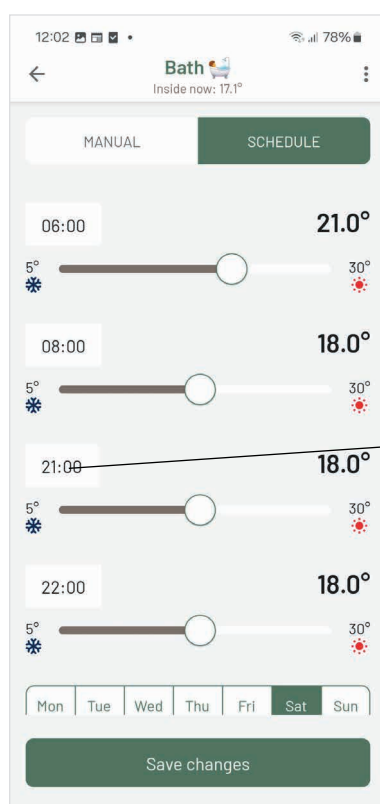


Using the program MANUAL

The Manual program is used when there is a need to change the temperature for a shorter time.

Wi-Fi Gen 1 - After 24 hours, the heater returns to the programmed schedule.

 Wi-Fi Gen 2 - The temperature set manually will persist. The heater will return to the programmed schedule only when you activate it yourself.

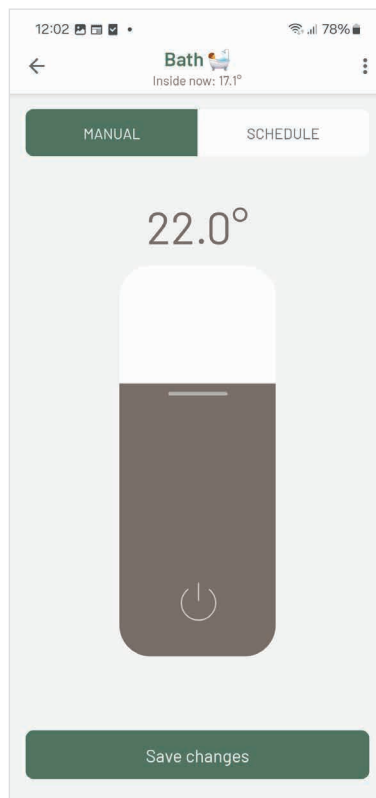


The Three Dots Context Menu

The three dots menu in the top right corner of the screen give you access to various sub-menus:

HOME SCREEN

The menu enables access to:

 
- Delete place
- Rename place
- Add a new place
- Add new device
- Settings

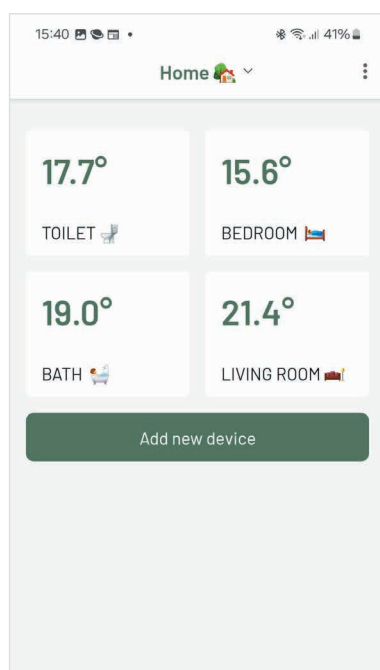

SCHEDULE SCREEN

The menu enables access to:

 
- Delete room
- Rename room
- Heaters in the room
- Copy schedule
- Add new device

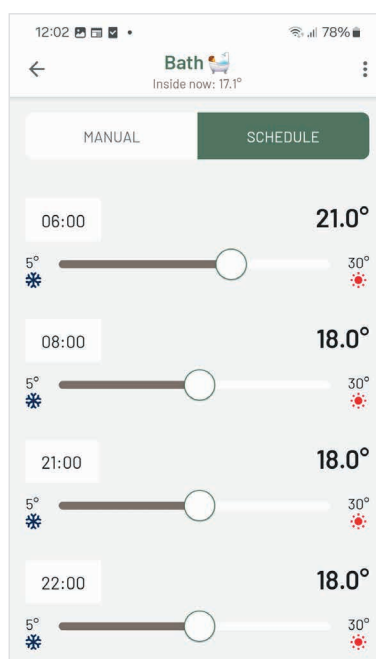

MANUAL SCREEN

The menu enables access to:

 
- Delete room
- Rename room
- Heaters in the room
- Add new device

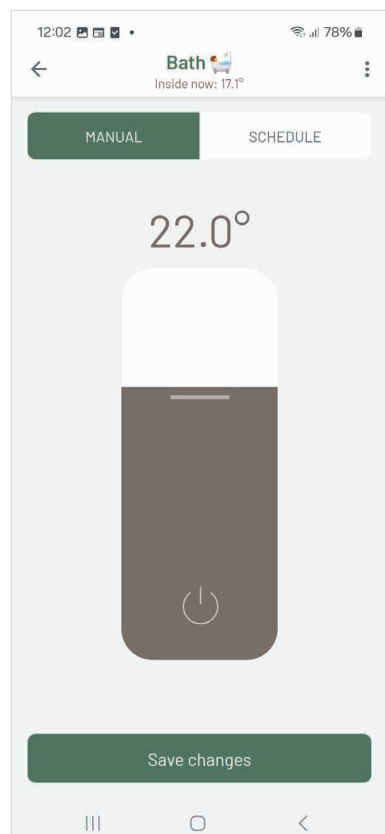

Heaters in the room

The menu next to the heater name enables access to:

 - Delete heater
- Move to another room
- Rename heater
- Turn on Child protection
- Turn the heater OFF/ON

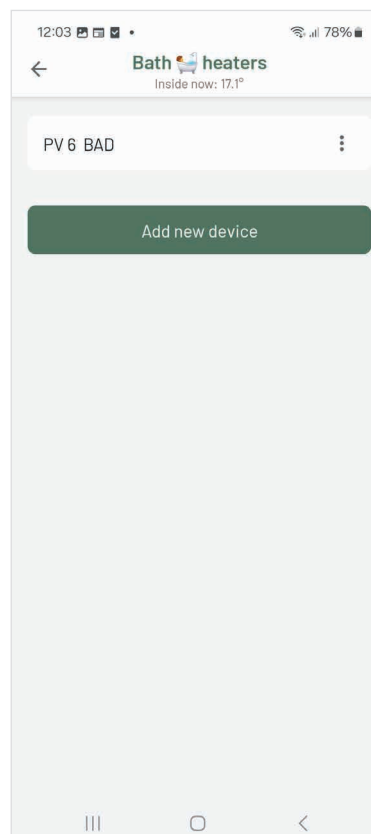

Wi-Fi Gen 1 Troubleshooting

If you get the “No devices found” screen, please try the following solutions:

- Reset the heater Wi-Fi Gen 1 to pairing mode / factory settings
- Make sure that your phone is connected to the 2,4Ghz band of your Wi-Fi network
- Check the requirements settings for 2,4GHz band. See next page.
- Make sure that your phone has Wi-Fi enabled
- Make sure that your phone has Location services enabled
- Try to terminate the Beha app on your smartphone and start the process again
- Try to input your Wi-Fi network password again and make sure that there was no typo
- Update the Beha app to the latest version

Wi-Fi Gen 2 Troubleshooting

If you get the “No devices found” screen, please try the following solutions:

- Reset the heater to the factory settings. When the heater is reset turn the switch OFF, on the heater. If it is possible, remove the plug from the socket. The power is switch on when you start the pairing process again.
- Terminate the Beha app on your smartphone and start the process again
- Make sure that your phone has Bluetooth and Wi-Fi enabled
- Make sure that the Beha app has permission to use Bluetooth and Location services
- Update the Beha app to the latest version
- Make sure that your heater and your phone are within range of your Wi-Fi Network
- Make sure that your Wi-Fi router is working properly
- Try to input your Wi-Fi network password again and make sure that there was no typo

Hints Gen 1 and 2 Heaters

Turn OFF Heater from the app

To turn OFF the heater go to settings, under the heater. The heater can also be turned off with tapping on the symbol for ON/OFF when you are in MANUAL program. To turn the heater ON just scroll the thermostat wheel on the heater or turn it ON from the app.



Child Protection

The child protection can be turned ON beneath settings for the heaters.

Gen 1: To remove it turn the switch OFF/ON or turn it off in the app.

Gen 2: The only way to turn it OFF is from the app or resetting the heater back to factory settings.

Refresh / update the Home screen

The app view can be refreshed from the Home screen. Swipe-down to refresh (from top to bottom of) the screen.

Offline Heaters In The App

In most of the cases our heaters appear offline in the app when:

- Wi-Fi network is down
- There is no internet connection
- During the power outage
- Firewall in the router blocking the heater

If you are sure that none of the cases above take place and heaters still persist offline, please try the following steps:

- Close the app.
- Turn the switch on the heater OFF
- Turn the router OFF and ON.
- When the router is connected to the internet again turn the switches on the heater ON.

Network name

The Wi-Fi network name cannot exceed 32 characters as this will prevent the heater from connecting.

Supported versions of smartphone OS

The Beha smartheater app is working from iOS 13 and Android 8.

Requirements for the Wi-Fi Router

To ensure the best possible signal, the router should be in the central part of your living area. The wireless signal is getting weaker when the distance is long. Walls and other objects may influence the reception.

If you have weak Wi-Fi reception at your home, try using a Wi-Fi extender. For seamless connection, the Wi-Fi extender must be configured with the same password and SSID as your main router.

For more information, please check your router settings and manual or contact the router manufacturer or the network provider.

Router Firewall

If all heaters are offline can it be a firewall in the router.

The firewall set up on your Wi-Fi router may block the linkup with our heaters. Make sure in your router settings that ports 8883 and 443 are open. Contact your router manufacturer or network provider for help.

Hints Wi-Fi Gen 1 heaters

Wi-Fi Router Configuration for Gen 1 heaters

Most modern Wi-Fi routers operate simultaneously in the 2,4GHz and 5,0GHz frequency bands. The Wi-Fi Gen 1 heaters operate only in the 2,4GHz band. Therefore, the pairing process of the Wi-Fi Gen 1 heaters is possible solely and exclusively when your smartphone is connected to the 2,4GHz band Wi-Fi.

Important settings for the router:

- Supports WEP, WPA/WPA2 and open network.
- It supports 2.4GHz and 20Mhz configurations. NOT 40Mhz configuration.
- Wireless network: IEEE 802.11 b/g/n Wi-Fi with automatic channel selection.
- DHCP on the router must be activated.
- Channel 1 to 13.
- Ports 8883 and 443 in the router must be open.

The easiest way to make sure that you are in the correct Wi-Fi network is to log in to your router's settings and temporarily disable the 5,0GHz band for the time of pairing the heater to the router.

If you are unsure how to conduct such a change on your router, please check your router manual or contact your internet provider or router manufacturer directly. When the pairing process is completed, you can reverse your router to the previous settings.

Asus Wi-Fi Router

On some ASUS routers there is a feature called "Smart Connect" that forces Wi-Fi devices over to 5 GHz if the signal quality is better than the required 2.4 GHz signal. This can cause problems for heaters because 5 GHz is not currently supported. We, therefore, recommend that the "Smart Connect" function is deactivated when you connect heaters and activated again after the heater has been connected successfully.

The setting can be found on your router under:
Wireless menu → Professional Tab → Airtime Fairness → Deactivate Airtime Fairness

VPN Must Be Turned Off

The VPN on the smartphone must be turned off during the heater linkup process.

BEHA

BEHA ELEKTRO AS
Evjeløkka 3
1661 Rolvsøy
beha.no
a part of Beha Group AS